

DEFECT TEST BD-R/ -RE

For Checking BD Players, BD Recorders and BD Drives *ABD-R540FP/ -RE540FP*

1. Purpose of use, Features


ABD-R540FP/ -RE540FP are Defect Test Discs designed for confirmation of various kind of operation, evaluation, measurement and adjustment of BD Players, Recorders and Drives. It is simulated Fingerprints adhered on the surface of a disc.

2. Specifications

- It is simulated Fingerprints adhered on the entrance surface for optical beam of a disc as Fingerprints Middle and Fingerprints Large.
- The error rate of Fingerprints area is managed within a specified level by our standard equipment.
- ABD-R540W/ -RE540W are used as a material disc. Please refer to ABD-R540W/ -RE540W Product Introduction for basic parameters.

Model Name	Fingerprints	Effective Chapter No. ※1			
ABD-R540FP, ABD-RE540FP	Middle	Layer0	13	Layer1	20
	Large	Layer0	15	Layer1	18

※ The location of Fingerprints is based on each chapter of Layer 0. Layer 1 side is just for reference.
note) Please be careful not to erase the content from, nor overwrite ABD-RE540FP.

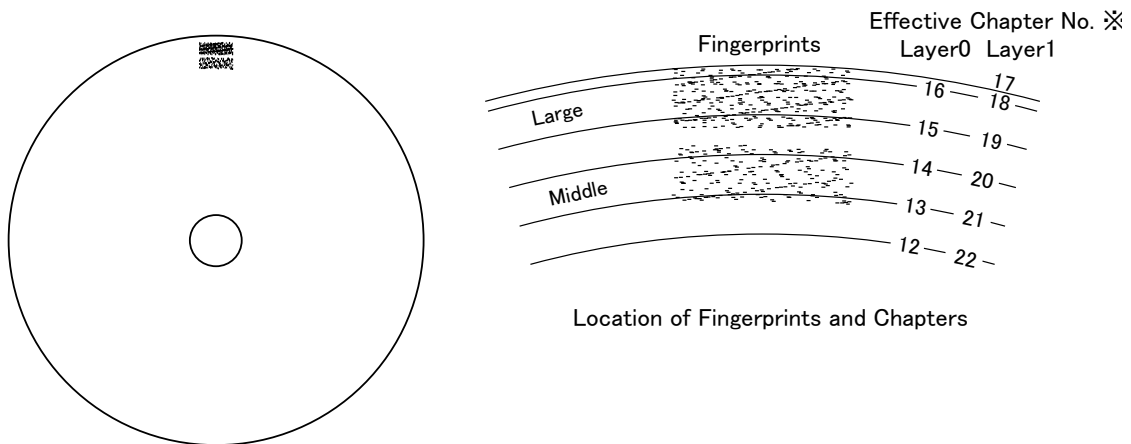

Imaged figure of Fingerprints (Entrance surface for optical beam)

Values in this sheet are measured by the equipments ALMEDIO-owned. Appearance and specifications are subject to change without notice.

<Proper handling of the disc>
Do not write on the surface with a pen and others, nor put a sticker on it.
Do not expose the disc to direct sunlight, nor leave it in the place of high temperature and high humidity.
After playing, store the disc in its own case.

ALMEDIO INC.
Sales Headquarters
<http://www.almedio.co.jp>
E-Mail : tm-sales@almedio.co.jp

|