

DEFECTS TEST DVD+R/ +RW

For Checking DVD Players, DVD Recorders and DVD Drives TDV-PR525CW/ -PW525CW


1. Purpose of use, Features

TDV-PR525CW/ -PW525CW are Defects Test Discs designed for confirmation of various kinds of operation, evaluation, measurement and adjustment of DVD Players, Recorders and Drives. It is simulated stains and Fingerprints adhered on the surface of a disc by Black dots and Fingerprints.

2. Specifications


- TDV-PR520CW, TDV-PW520CW are used as a material disc. Please refer to TDV-PR520CW, TDV-PW520CW Product Introduction for basic parameters.
- Fingerprints A and B are managed by dimension of small microscopic dots.
- Effective Chapter

Chapter No.	Defects
1	None
2	None
3	None
4	None
5	None
6	None
7	Black dot width 0.4 mm
8	Black dot $\phi 0.6$ mm
9	Black dot $\phi 0.8$ mm
10	Black dot width 1.0 mm
11	Black dot width 1.0 mm
12	None
13	Fingerprint A
14	Fingerprints A or B
15	Fingerprint B
16	None

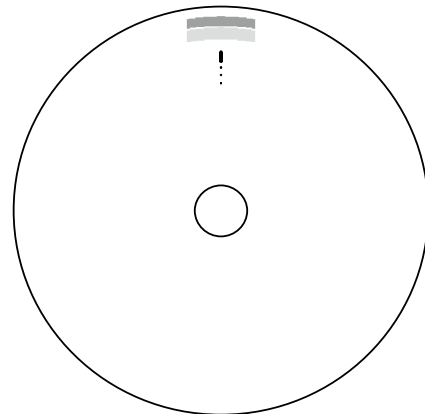


Imaged figure of defects (Read-out side)

note) Please be careful not to erase the content from, nor overwrite TDV-PW525CW

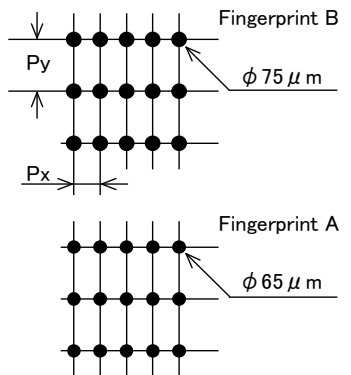

Clearance of respective dots mm
Tangential direction : $P_x=0.125$
Radial direction : $P_y=0.25$

Details of Fingerprints

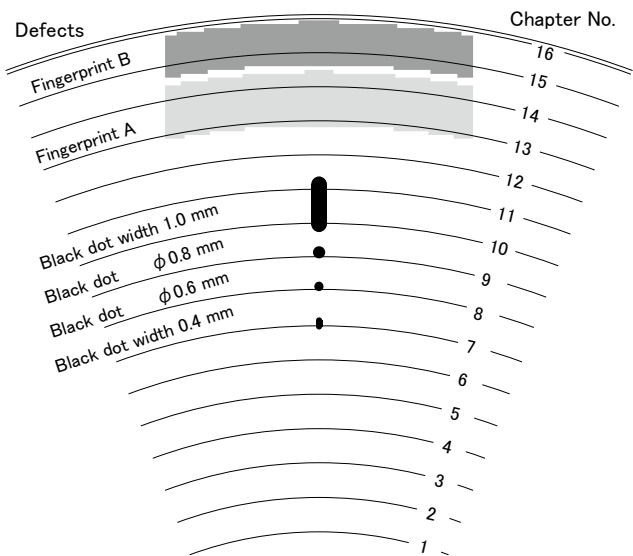

Location of Defects and Chapters

Values in this sheet are measured by the equipments ALMEDIO-owned. Appearance and specifications are subject to change without notice.

<Proper handling of the disc>
Do not write on the surface with a pen and others, nor put a sticker on it.
Do not expose the disc to direct sunlight, nor leave it in the place of high temperature and high humidity.
After playing, store the disc in its own case.

ALMEDIO INC.
Sales Headquarters
<http://www.almedio.co.jp>
E-Mail : tm-sales@almedio.co.jp